

# Dell Pro Plus Compact Mouse MS5120W




## User's Guide

**Mouse Model: MS5120W**  
**Regulatory Model: MS5120Wt, SD-8160**

 Dell Technologies

# Notes, Cautions, and Warnings

---

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2019-2024 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2024-11

 
Rev. A03

# Contents

Notes, Cautions, and Warnings.....	2
What's in the box .....	4
Features .....	5
Dell Display and Peripheral Manager.....	6
Setting up your wireless mouse .....	7
Pairing your wireless mouse .....	10
Pairing your mouse using the USB dongle .....	10
Pairing your mouse using Bluetooth.....	11
Specifications .....	13
General.....	13
Electrical .....	13
Physical characteristics .....	13
Environmental.....	14
Dual Wireless.....	14
Troubleshooting.....	15
Oman regulatory information.....	19
Statutory information.....	20
Warranty .....	20
Limited warranty and return policies .....	20
For U.S. customers: .....	20
For European, Middle Eastern and African customers:.....	20
For non-U.S. customers: .....	20

# What's in the box

---

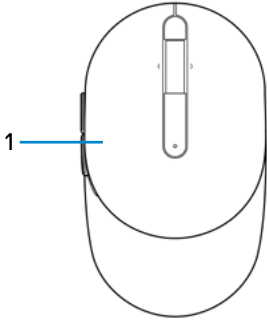


1 Mouse

3 Battery (AA-type)




 
2 USB dongle

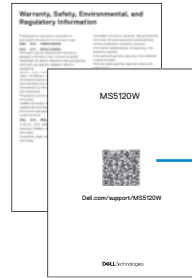

4 Documents

# Features

  ---

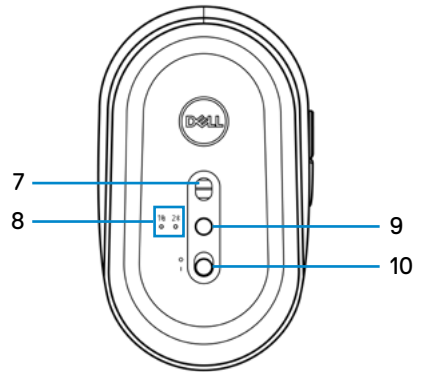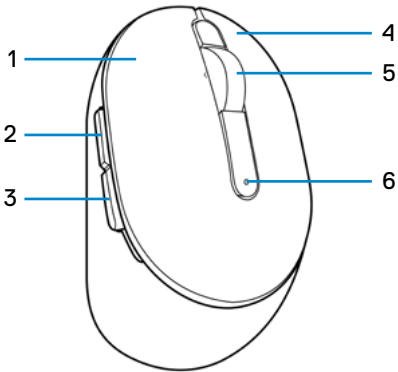

- 1 Left button
- 3 Backward button
- 5 Scroll wheel
- 7 Optical sensor
- 9 Connection-mode button

- 2 Forward button
- 4 Right button
- 6 Battery-status light
- 8 Connection-mode lights
- 10 Power switch

# Dell Display and Peripheral Manager

---

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Assign shortcuts to programmable buttons of your mouse through the **Button Customization** tab. You can even set shortcuts specific to an app with App specific settings.
- View device information such as firmware version and battery status for wireless devices.
- Configure DPI setting and set primary mouse button.
- Upgrade to the latest firmware for your device.
- Pair or unpair to the RF dongle.

## Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.

 
**NOTE:** If the download prompt does not appear within a few minutes, you can manually install the software from **Drivers & Downloads** tab on [Dell.com/support/MS5120W](https://Dell.com/support/MS5120W).

For more information, see the *Dell Display and Peripheral Manager User's Guide* in the **Documentation** tab.


# Setting up your wireless mouse

---


- 1 Locate the slot on the side of the mouse cover. Using your fingertip, pry open the mouse cover.

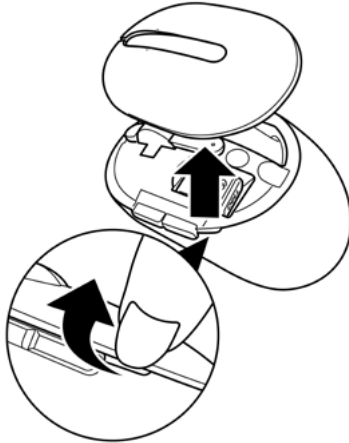

 
- 2 Remove the USB dongle from its compartment.

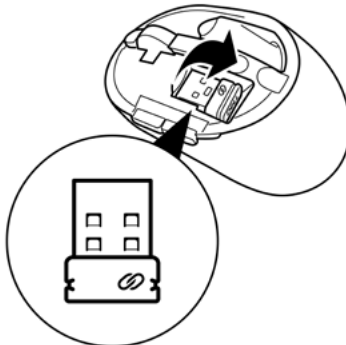

 
3 Install the AA battery into the battery compartment.

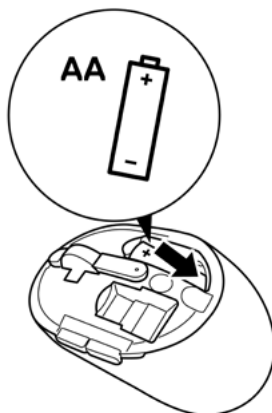

4 Replace the mouse cover.

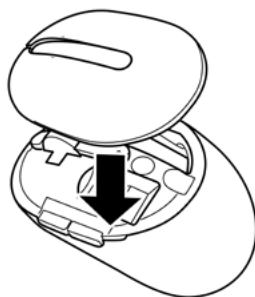 

 5 Slide the power switch to turn on the mouse.

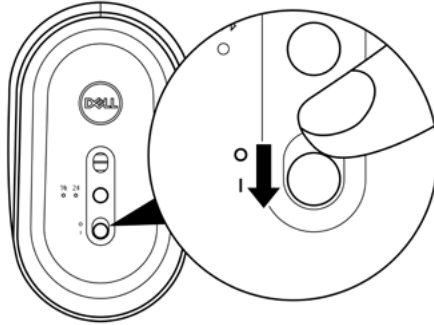


 **NOTE:** Ensure that the distance between your computer and mouse is within ten meters.

# Pairing your wireless mouse

 
---

Your Dell wireless mouse can be paired with devices using either the USB dongle or Bluetooth. You can pair and switch between a laptop, desktop, or any compatible mobile device.


## Pairing your mouse using the USB dongle

 **NOTE:** You can connect a device to your wireless mouse using the Dell Universal pairing.


- 1 Connect the Dell Universal USB dongle to the USB port on your computer.

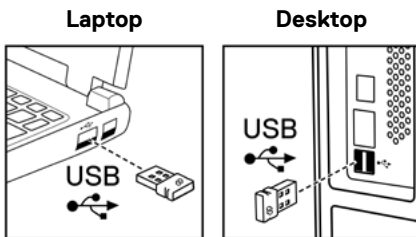

 - 2 The connection-mode light (10) on the mouse turns on to indicate the Dell Universal pairing, and then turns off.

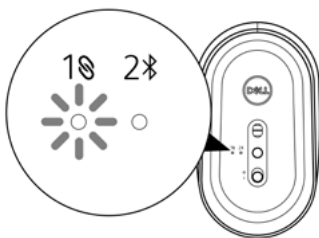


The mouse is paired with your computer.

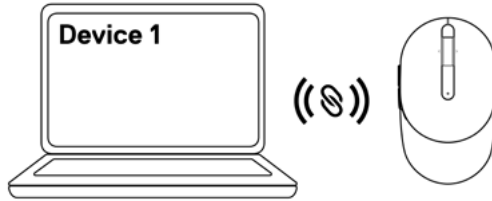 


## Pairing your mouse using Bluetooth

**NOTE:** You can connect a second device to your wireless mouse using Bluetooth.

 - 1 Press the connection-mode button twice on your mouse (within 3 seconds) until the connection-mode light (2\*) turns on, indicating that the Bluetooth connection is selected.

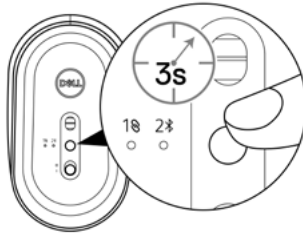

 The connection-mode light (2\*) blinks for 3 minutes, indicating your mouse is in the pairing mode.

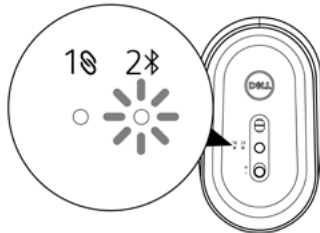


- 2 Pair your mouse with your Bluetooth enabled computer.
  - a. In Windows Search, type **Bluetooth**.
  - b. Click **Bluetooth and other devices settings**. The **Settings** window appears.
  - c. Ensure that the Bluetooth is turned on.
  - d. From the **Other devices** section, click **Dell Mouse**.

 **NOTE: If Dell Mouse is not listed, ensure that the pairing mode is enabled on the mouse.**

 - 3 Confirm the pairing process on both mouse and your computer.

The connection-mode light (2✱) turns solid white for a few seconds to confirm the pairing, and then the light turns off. After your mouse and computer pairing is completed, the mouse connects to the computer automatically when the Bluetooth is enabled and both devices are within the Bluetooth range.

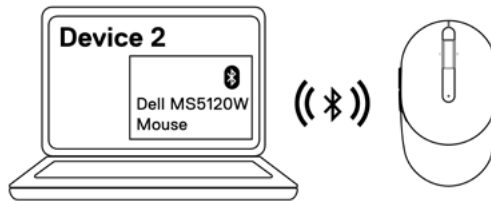

# Specifications

---

## General

Model number	MS5120W
Connection type	Dual Wireless (Bluetooth LE and 2.4 GHz with nano dongle)
System requirement	<ul style="list-style-type: none"><li>• Windows 8, 32/64-bit</li><li>• Windows 10, 32/64-bit</li><li>• Windows 11</li><li>• Android (BLE only)</li><li>• Chrome</li><li>• Linux 6.x, Ubuntu, Neokylin</li><li>• Free-DOS (RF dongle only)</li></ul>

## Electrical

Operating voltage	1.6 V ~ 0.9 V
Battery life	Approximately 36 months
Battery type	AA Battery (2800 mAH)

## Physical characteristics

Weight (with battery)	102 g (0.23 lb)
Weight (without battery)	79 g (0.17 lb)
Dimensions:	
Length	104.5 mm (4.11 in.)
Width	61.5 mm (2.42 in.)
Height	38.3 mm (1.51 in.)

## Environmental

Temperature:

Operating -10°C to 50°C (14°F to 122°F)

Storage -40°C to 65°C (-40°F to 149°F)

Storage humidity 95% maximum relative humidity;  
non-condensing

## Dual Wireless

RF protocol

- Bluetooth 5.0 LE
- 2.4 GHz RF

Range

- Up to 10 m radio range.
- No performance degradation up to maximum radio range (10 m).

# Troubleshooting

---

Problems	Possible solutions
Mouse is not functioning	<ol style="list-style-type: none"><li>1 Check if the battery is inserted in the correct orientation. The battery “+” and “-” ends should be placed as indicated on the battery compartment.</li><li>2 Check the battery level.<ul style="list-style-type: none"><li>• If the mouse uses a rechargeable battery, ensure that the battery is fully charged.</li><li>• If the battery is exhausted, replace it with a new one.</li></ul></li><li>3 Turn off the mouse, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.</li><li>4 Restart your computer.</li><li>5 If you are pairing the mouse with the USB dongle, ensure that the USB dongle is directly connected to your computer.<ul style="list-style-type: none"><li>• Avoid using the port replicators, USB hubs, and so on.</li><li>• Change the USB port.</li></ul></li><li>6 If you are pairing the mouse using Bluetooth for the first time, refer to the <b>“Pairing your mouse using Bluetooth”</b> section for more information.<ul style="list-style-type: none"><li>• On your computer, turn off the Bluetooth, and then turn it on.</li><li>• Check for interference that may affect Bluetooth connectivity such as, nearby Wifi and USB 3.0 devices.</li></ul></li><li>7 Ensure that the distance between your computer and mouse is within 10 meters.</li></ol>

Unable to pair the mouse with your computer

- 1 Check the battery level.
  - If the mouse uses a rechargeable battery, ensure that the battery is fully charged.
  - If the battery is exhausted, replace it with a new one.
- 2 Turn off the mouse, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.
- 3 Restart your computer.
- 4 If you are pairing the mouse with the USB dongle, ensure that the USB dongle is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.
- 5 Insert the USB dongle into another USB port on your computer.
- 6 Ensure that the distance between your computer and mouse is within 10 meters.

Unable to pair the mouse with your computer using Bluetooth

- 1 Check the battery level.
  - If the mouse uses a rechargeable battery, ensure that the battery is fully charged.
  - If the battery is exhausted, replace it with a new one.
- 2 Turn off the mouse, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.
- 3 On your computer, turn the Bluetooth off and then on.
  - Ensure that the operating system is Windows 11, Windows 10, Windows 8, Chrome, or Android.
  - For Android devices, ensure that the mouse is set to Bluetooth Low Energy (BLE) model. For more information, see the documentation that came with your Android device.
- 4 Restart your computer.

Unable to pair the mouse with your computer using Bluetooth  
(*continue*)

- 5 Check for interference that may affect Bluetooth connectivity such as, nearby Wifi and USB 3.0 devices.
  - Check for any wireless devices that are in close proximity such as wireless networking devices (Bluetooth printer and USB 3.0 dongle), wireless pointing devices, and microwave ovens.
  - Move away from these devices.
- 6 Ensure that the distance between your computer and mouse is within 10 meters.
- 7 Check if your computer is included in the list of Dell computers compatible with the mouse.  
See [www.dell.com/support](http://www.dell.com/support) for more information.

Mouse pointer does not move

- 1 Check the battery level.
  - If the mouse uses a rechargeable battery, ensure that the battery is fully charged.
  - If the battery is exhausted, replace it with a new one.

Left/right buttons does not work

- 2 Turn off the mouse, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the battery is fully depleted, the battery-status light will not turn on.

Wireless connection is lost

- 3 Restart your computer.
- 4 If you are using the mouse through Bluetooth connection, ensure that you have successfully paired the mouse with your computer. See **“Pairing your mouse using Bluetooth”** section for more information.
  - Turn off the Bluetooth in your computer and then turn it on.
  - Press the connection-mode button twice on your mouse (within 3 seconds) until the connection-mode light (2⌘) turns on indicating that the Bluetooth connection is selected.
  - Check for interference that may affect Bluetooth connectivity such as, nearby Wifi and USB 3.0 devices.
- 5 Ensure that the distance between your computer and mouse is within 10 meters.

Solving a slow moving cursor

- 1 Ensure that the sensor is not obstructed or dirty.
- 2 Glass or very smooth glossy surfaces are not suitable for the mouse sensor to capture the mouse movement. Using a dark colored fabric mouse pad can improve the tracking.
- 3 Change the mouse settings to adjust the pointer speed.  
Click on the tab that matches the Operating System (OS) installed on your laptop/desktop and perform the steps within that section to change the settings.
  - a. In the **Search** box, type `main.cpl`. The **Mouse Properties** dialog box appears.
  - b. Click or tap `main.cpl` in the list of programs.
  - c. Click the **Pointer Options** tab. In the **Motion** section, move the slider to adjust the pointer speed to the desired level.
  - d. Click or tap **OK**.

Dell Display and Peripheral Manager software features are not working as intended.

The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer. For more information, see the documentation for Dell Display and Peripheral Manager at [www.dell.com/support/ddpm](http://www.dell.com/support/ddpm).

# Oman regulatory information

---

**Regulatory Model: MS5120Wt, SD-8160**



# Statutory information

---

## Warranty

### Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

### For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

### For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Dell.com/terms](https://www.dell.com/terms), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

### For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.